



contact: Sven Prinz

trial number: 2025

target: Flakeanalyser High Resolution with black belt and metal sensor,
examination of single items

carried out by: Rafal Barabola

pretreatment: no pretreatment

date: 2025/05/11

flakeanalyser

The flakeanalyser is an NIR-Analysis-Device for fast and non-destructive quality control and material analysis of plastic regrinds.

TECHNICAL DATA

■ Dimensions: 1.670 mm height 1.050 mm width 795 mm depth	■ Weight: approx. 250 kg ■ Connected load: 2,1 kW (230 VAC, 16A)	■ Grain sizes: 2 - 30 mm ■ Throughput: approx. 250 g/min	■ Sample volume: approx. 8 l
---	---	---	--



FILLING

The sample material enters the unit via a feed hopper.




USER INTERFACE



ANALYSIS VIA NEAR-INFRARED SPECTROSCOPY

Sensor system with high-resolution hyper-spectral imaging technology captures characteristic spectrum.

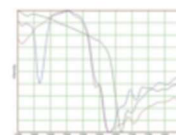

RETURN

The analysed sample material is dispensed into a collection container after completion of the measurement.


RESULT

The results are output via EXCEL, e-mail dispatch and label printer.




DEVICE FEATURES


- AI-based analysis of regrinds and plastic flakes according to type of
 - material
 - object colour
 - volume
- simultaneous allocation of detected objects according to color and material
- statistical consideration of black and dark objects
- weight-related evaluation based on measured volumes
- determination of particle size distribution
- convertible to continuous measurement (inline version)
- modern and solid design
- intuitive operation via touch screen
- automatic output of protocols
- automatic archiving analysis results

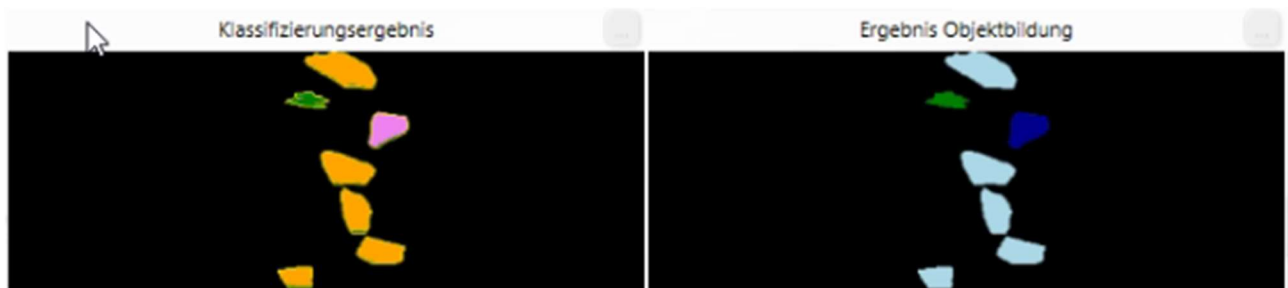

PET – crystalline:

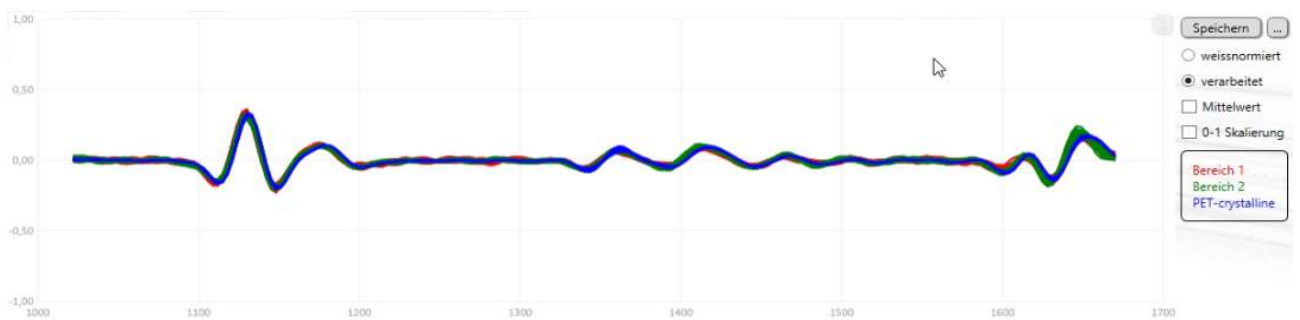

PVC:

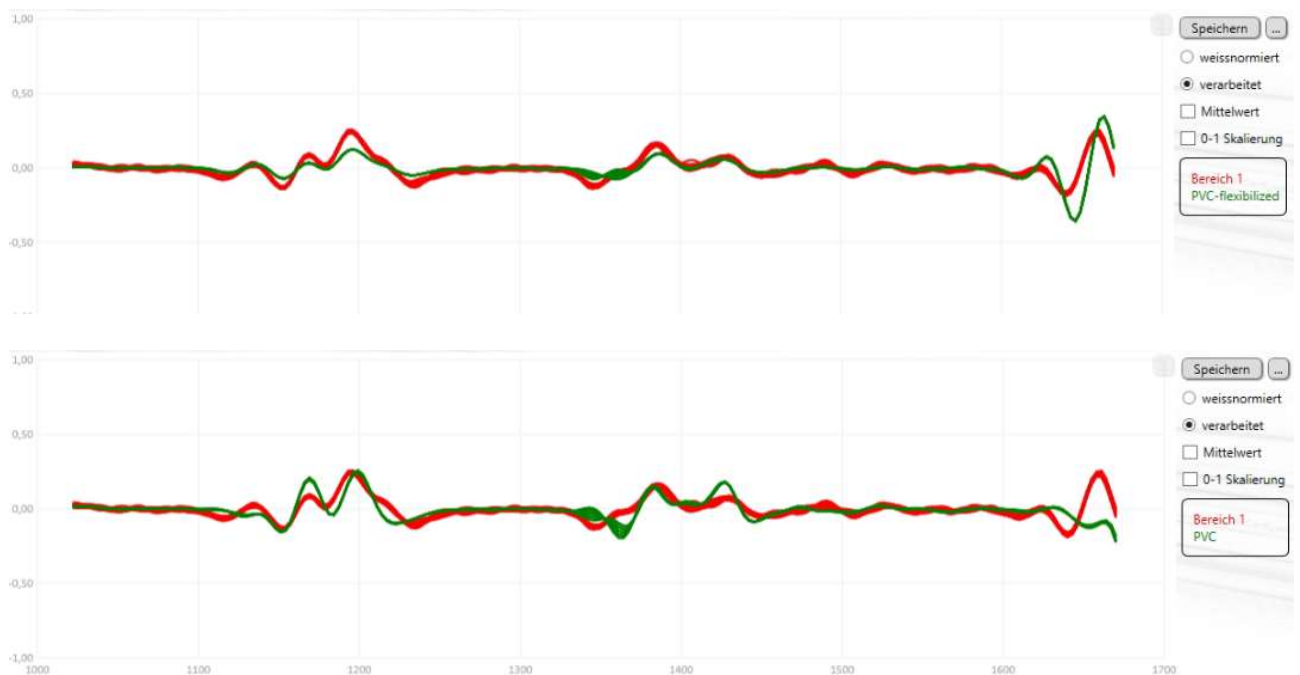

Schwarz:

